


# GROW TUBE ASSEMBLY

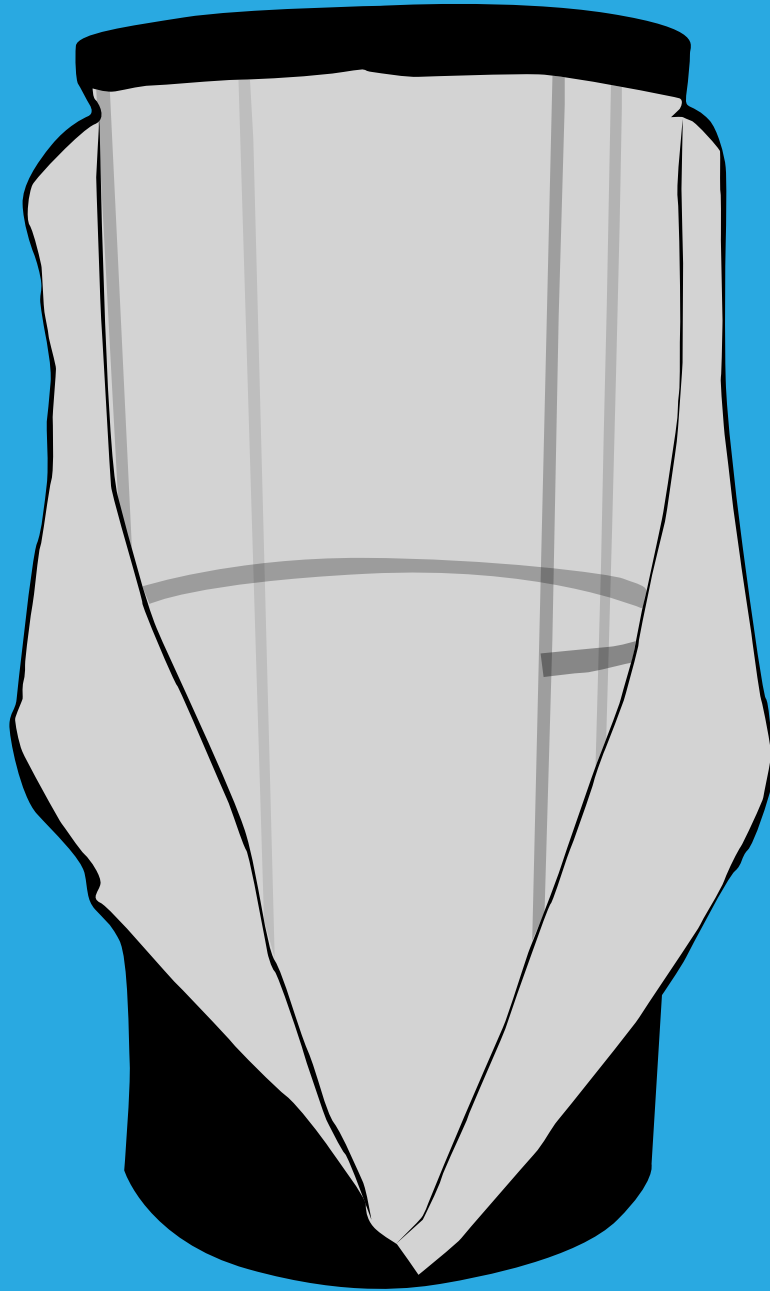

**ALL COMPONENTS**

# TENT ASSEMBLY

## STEP 1

ASSEMBLE THE SKELETON BASE (#1), INSERT 4 (#3) CONNECTOR POLES INTO BASE, INSERT (#2) POLES INTO CONNECTOR POLES WITH SCREW HOLES FACING OUT, ATTACH TOP BASE SEE ARROW 1



## STEP 2

USE BOLTS PROVIDED TO SCREW IN CENTER BANDS. THIS ENSURES INTEGRITY OF TENT WHILE NEGATIVE PRESSURE IS IN EFFECT. TENT SKELETON IS NOW COMPLETE SEE PICTURE 1, 2, & 3




## STEP 3

UNZIP ALL ZIPPERS TO OPEN TENT ENTIRELY. LAY FLAT ON GROUND AND INSERT TENT SKELETON. WRAP TENT AROUND TOP BASE AND BOTTOM BASE SEE PICTURE 4

## STEP 4

**GENTLY** PULL TENT FLAPS OVER FRAME AND PULL ZIPPERS OVER FROM EACH SIDE A LITTLE BIT AT A TIME. MAKE SURE THE 2 6 INCH HOLES AND ONE 4 INCH HOLE ARE AT THE TOP GROW TUBE TENT IS NOW COMPLETE SEE PICTURE 5

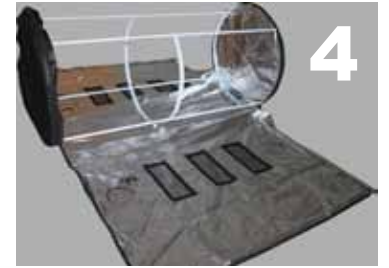

---

# ROPE HANGERS & COOL TUBE

## STEP 1

ATTACH ZIP TIES ENCLOSED TO THE TOP BASE BAR, DO NOT TIGHTEN COMPLETELY SEE ARROW 1

## STEP 2

ATTACH ROPE HANGERS TO ZIP TIE, TIGHTEN ZIP TIES TO BASE SEE ARROW 2

## STEP 3


INSERT METAL V HOOKS INTO COOL TUBE AND GENTLY HANG FROM ROPE HANGERS

## STEP 4

INSTALL FLANGES USING SCREWS AND FLANGE RINGS

## STEP 5

ATTACH DUCTING FROM ENDS OF COOL TUBE TO FLANGES USING CLAMPS ENCLOSED SEE ARROW 3

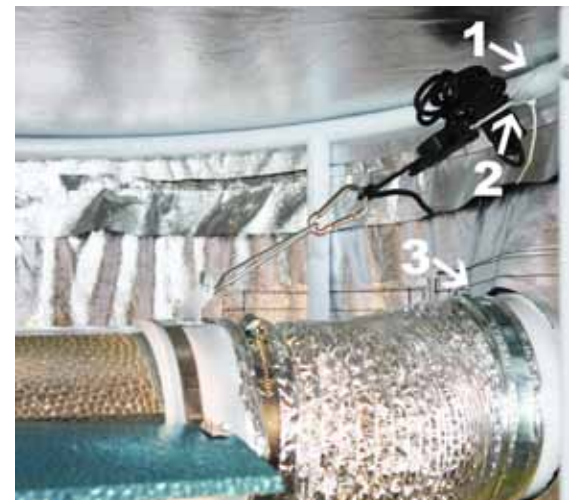

# ODOR CONTROL SYSTEM\*

## STEP 1

INSTALL 4 INCH FLANGE INTO TOP RIGHT 4 INCH HOLE  
SEE ARROW 4

## STEP 2

SET CARBON FILTER ON FLOOR

## STEP 3

SET DUCT FAN ON TOP OF FILTER  
SEE ARROW 5

## STEP 4

ATTACH DUCTING WITH PIPE CLAMPS ENCLOSED

## STEP 5

IN BOTTOM LEFT 4 INCH PORT INSERT INTAKE FAN  
SEE ARROW 6

PLEASE NOTE THE HOLES WILL NEED TO BE PUNCHED, USING A POINTED SCREWDRIVER WILL WORK

## STEP 6

INSTALL INTAKE FAN INSIDE THE TENT

## STEP 7

RUN LONG BOLTS THROUGH, AFFIX AND TIGHTEN FROM THE REAR

## STEP 8

RUN CORD OUT THROUGH SOCK

\* RAPTOR ODOR CONTROL DOES NOT COME STANDARD WITH GROW TUBE



TEST THE SURGE PROTECTOR TIMER PLUG COMPONENTS INTO THAT TIMER

RAPTOR ODOR CONTROLLER 24 HOUR

INTAKE FAN TIMED WITH LIGHTS

INTERCOOLER ON COOL TUBE AND BALLAST TIMED

AIR PUMPS 24 HOUR

READ NUTRIENT SCHEDULES, TAKE YOUR TIME, AND ENJOY HOME FARMING !

# VISUAL SETUP GUIDE FOR TENT

**1**



**2**



**3**



**4**




**5**



**6**



**7**

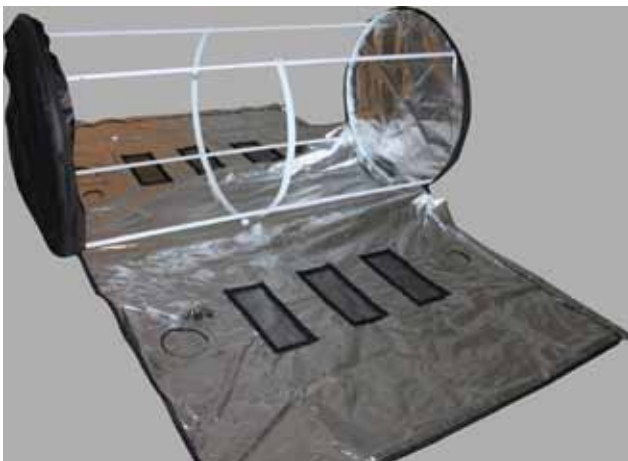

**8**

